
Stomp Manager Software

Important Notes:
①Before installing the latest version of Stomp Manager, you must manually uninstall any older version of Stomp Manager from your computer system. Failure to do so may cause software bugs.


② Before using the latest version of Stomp Manager, update the firmware of your LEAKTO effects pedal to the latest version (current version: V1.1.3). Otherwise, you may encounter bugs that prevent NAM and IR files from being imported.

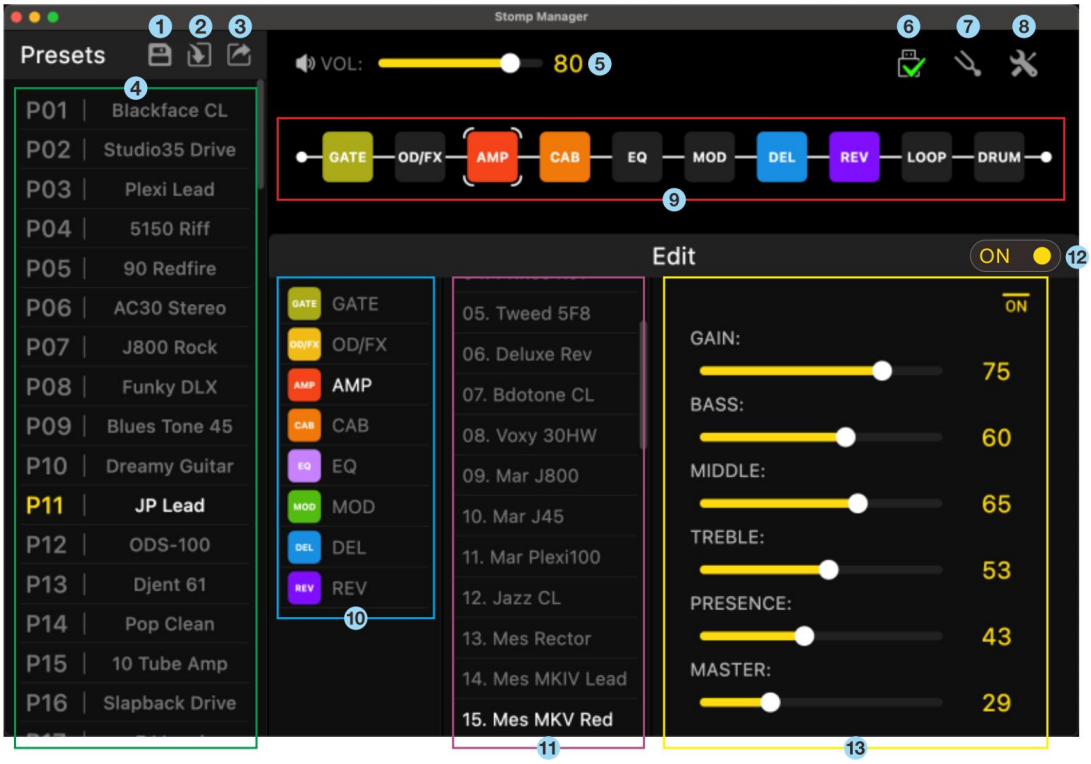


System requirements:
Windows : Win10 or later (64bits)
MacOS: Catalina 10.15.6 or later
Stomp Manager comes with the Stomp Manager software, which allowsparameter editing, NFILE import, 3rd IR import, and preset import/export.

1. **Save:** Press to save the current parameters to the selected preset slot.
2. Import: Click to import presets to the current slot. Batch import of multiple presets is supported.
3. Export: Click to export the current preset to your computer. Batch export of multiple presets is supported.
4. Preset Slot: Click with the mouse to select presets.

5. **Preset Vol:** Adjusts the volume of selected preset.
6. **Connection:** Indicates whether the device is connected to the software.
7. **Tuner:** Click to enter the tuner function.
8. **System:** Click to enter the system menu.
9. **Effect Chain:** Click to enter the effect block. Click and hold to move and adjust the effect chain order. Right-click on an effect block to turn that block on or off.
10. **Effect Module:** Click to enter the different modules.
11. **Effect Type:** Click to switch between different effect types.
    AMP Module: Slots 31 - 40 are "NM User Slots" where you can import NAM files using the Import icon in the right-side edit panel.

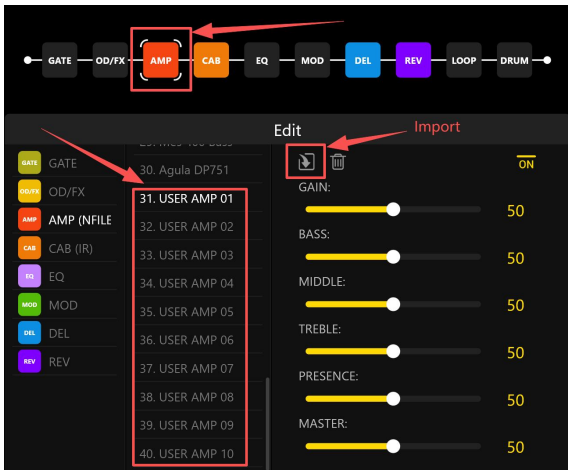

    CAB Module: Slots 31 - 40 are empty slots, where you can import 3rd IR files using the Import icon in the right-side edit panel.

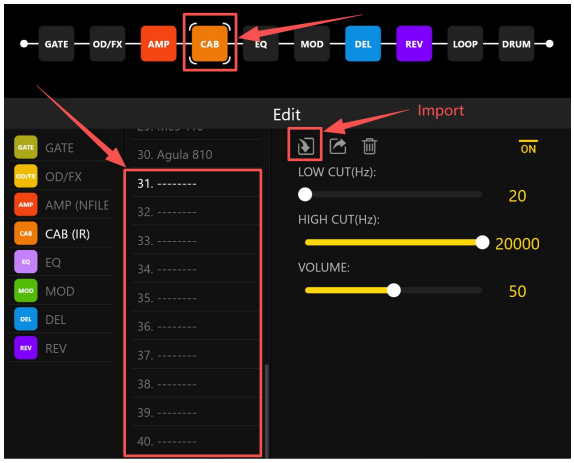

12. **ON/OFF:** Switches the selected effect on or off.

13. **Edit Panel:** Adjusts the parameters of the selected effect.